



Wallace Cranes

Safety Tag and Label Locations, Round Tube, Tri-Adjustable

Safety Tag Location

The following sketch shows the location of required safety tags on Wallace Tri-Adjustable Gantry Cranes. All locking pins or pins with a quick release must have a corresponding Tag 1969. Following the schematic below is a complete listing of all text found on all Labels and Tags on the Crane.



NOTE: Labels are found at identical locations on the left and right sides.



Caution Labels 1973, 1975

1973/R14

CAUTION

1. Read and understand instructions before using this gantry.
2. Inspect gantry thoroughly before using (see Form 379) for damaged or missing parts.
3. Do not lift more than rated capacity.
4. Center hoist over the load.
5. Do not allow load to swing or to roll against any supporting members.
6. When moving gantry under load push on the gantry, not the load. Be certain that rolling surface is hard, level, clean and smooth.
7. Do not move gantry over 50 feet per minute (1/2 mph).
8. Not to be used for lifting or supporting humans.

**REQUEST FREE REPLACEMENTS IF
THIS OR ANY OTHER GANTRY
LABELS OR INSTRUCTIONS ARE
DAMAGED OR MISSING.**

**WALLACE CRANES
MALVERN, PA 19355
www.wallacecranes.com**

1975/R13

CAUTION

**FOLLOW INSTRUCTIONS BELOW
BEFORE PULLING THIS LOAD BOLT.
GANTRY WILL NOT STAND ON 3 LEGS -
INJURY COULD RESULT FROM GANTRY
COLLAPSING.**

**SEE "OPERATING AND SAFETY
INSTRUCTIONS" (Form 379) FOR
COMPLETE INFORMATION.
ADJUSTING HEIGHT WHEN THIS LEG IS
USED IN A WALLACE ADJUSTABLE
GANTRY:**

1. Do not make adjustments when the unit is under load.
2. Secure Trolley and Hoist to prevent rolling to low end of beam.
3. Securely support the I-Beam externally (or use Wallace Gantry Jack).
4. Extend caster frame for greatest stability.
5. Lock casters parallel to I-Beam.
6. Install the Safety Stops (one per leg) before pulling load bolts. They limit downward leg travel - see instructions on tags attached to stops.
7. Raise upper leg slightly to release the load bolt, then pull out and rotate 90° (or pin where applicable) to "lock out" position.
8. After adjusting height, turn back to unlock. Be certain all load bolts are fully engaged.
9. Relocate safety stops with tags.

**WALLACE CRANES
MALVERN, PA 19355
www.wallacecranes.com**



Caution Label 1972, Caution Tags 1969, 1970, 1980

1972/R14



**FOLLOW INSTRUCTIONS BELOW
BEFORE REMOVING THIS TREAD
ADJUSTMENT PIN**

**SERIOUS INJURY COULD RESULT
FROM COLLAPSE OF GANTRY
AND/OR MOVEMENT OF LOAD.**

1. Do not make adjustments when the gantry is under load.
2. Secure Trolley and Hoist to prevent rolling to low end of I-Beam.
3. Make certain the restraining cable is secured in place (inside or outside of the tubes, depending on model).
4. Securely support the I-Beam externally or:
5. Use Wallace Gantry jack to adjust in accord with instructions on jack and in Form 379.
6. Or use lever type winch or block and tackle, etc., to adjust tread in accord with instructions in Form 379.
7. Remove the tread adjusting pin and adjust as required. Replace the tread adjusting pin and secure with locking pin.

**WALLACE CRANES
MALVERN, PA 19355
www.wallacecranes.com**

1969
R14



**DO NOT REMOVE
THIS LOCKING PIN
GANTRY COULD
COLLAPSE --
INJURY CAN RESULT**

Only remove to
disassemble gantry after
I-Beam is securely
supported externally.
See Mfrs. instructions for
assembly/disassembly.

**WALLACE CRANES
MALVERN, PA 19355
www.wallacecranes.com**


Front/Rear identical
on Tag 1969

1970
R14



Only remove this locking pin
when adjusting caster
frame spread.
Read instructions
on label 1972.
After making adjustment,
replace this locking pin to
secure tread adjustment pin.

**WALLACE CRANES
MALVERN, PA 19355
www.wallacecranes.com**

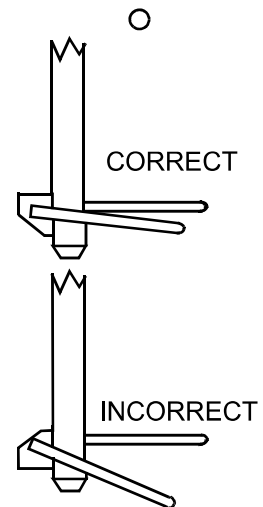


1980
R14





**DO NOT REMOVE
THIS LOCKING PIN
GANTRY COULD
COLLAPSE --
INJURY CAN RESULT**

Only remove to
disassemble gantry after
I-Beam is securely
supported externally.
See Mfrs. Instructions for
assembly/disassembly.

**WALLACE CRANES
MALVERN, PA 19355
www.wallacecranes.com**

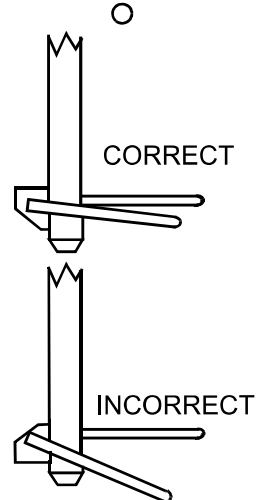

Tag 1337

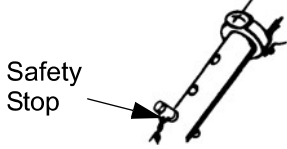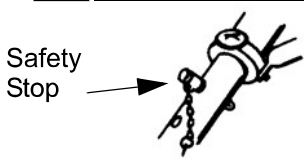1337 R14  CAUTION  <u>LOWERING GANTRY</u> Place safety stop 3 holes or fewer below upper leg. Lower leg 2 holes maximum. Repeat as required. <u>See other side for raising.</u> WALLACE CRANES MALVERN, PA 19355 www.wallacecranes.com	 CAUTION  <u>RAISING GANTRY</u> Place safety stop 1 hole below upper leg casting. Raise leg 2 holes maximum. Repeat as required. <u>See other side for lowering.</u> WALLACE CRANES MALVERN, PA 19355 www.wallacecranes.com
--	--

Front of Tag

Rear of Tag

