




# Wallace Cranes

## Safety Tag and Label Locations, 8 and 10 Ton Square Tube

### Safety Tag Location

The following sketch shows the location of required safety tags on Wallace Tri-Adjustable Gantry Cranes. All locking pins or pins with a quick release must have a corresponding Tag 1969. Following the schematic below is a complete listing of all text found on all Labels and Tags on the Crane.

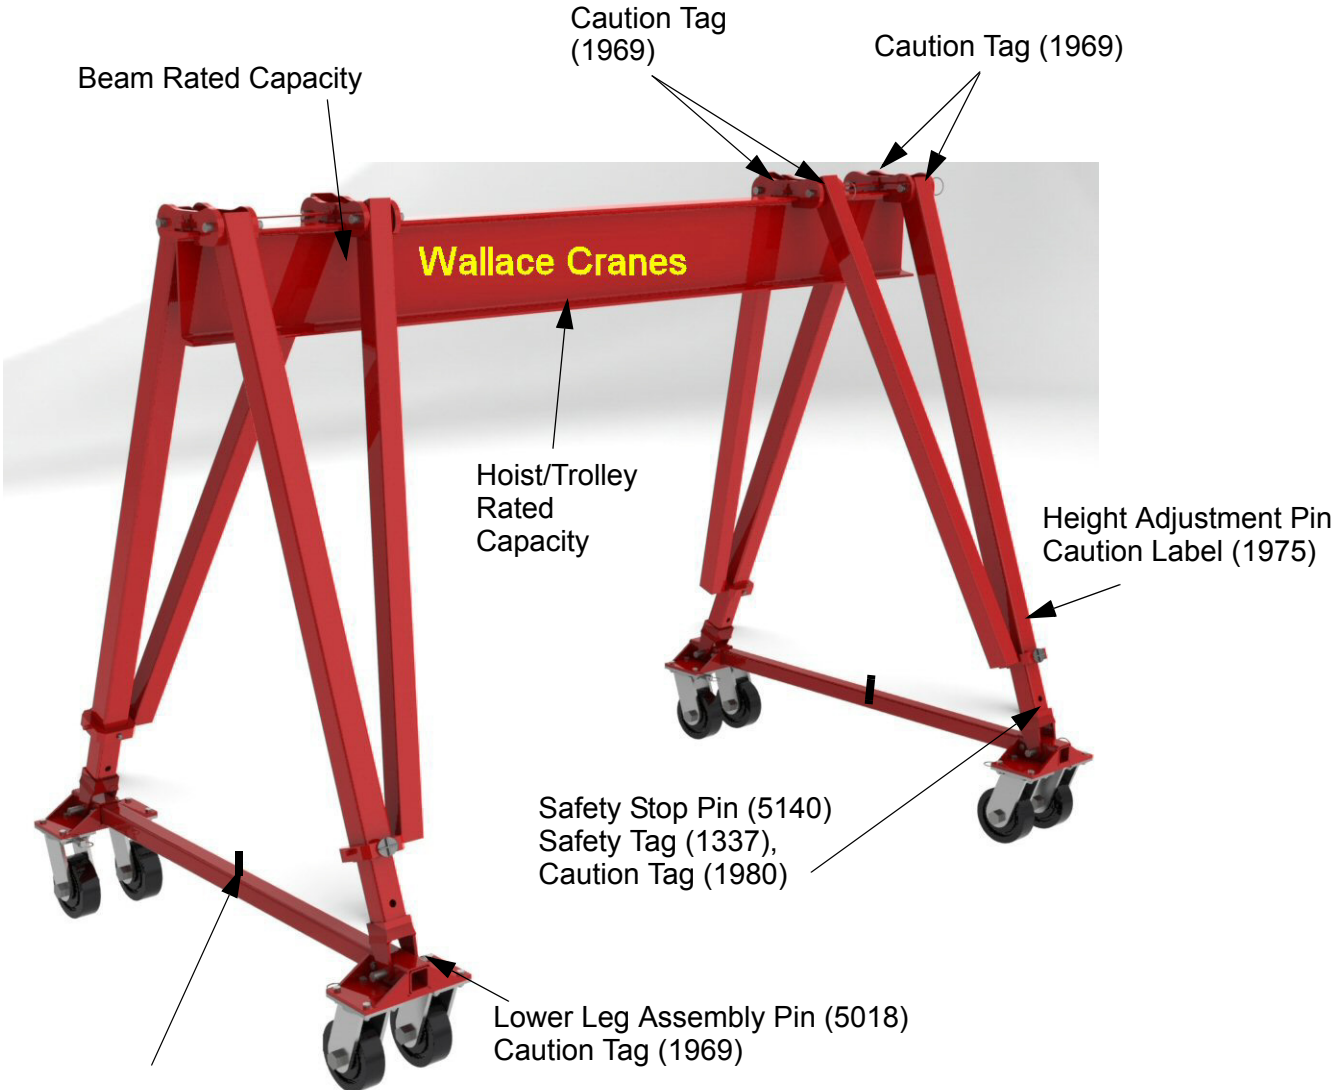

Caster Frame Adjusting Pin (5139)  
Caution Labels (1972, 1973),  
Caution Tag (1970)

**NOTE:** Labels are found at identical locations on the left and right sides.



## Caution Labels 1973, 1975

1973/R14

### **CAUTION**

1. Read and understand instructions before using this gantry.
2. Inspect gantry thoroughly before using (see Form 379) for damaged or missing parts.
3. Do not lift more than rated capacity.
4. Center hoist over the load.
5. Do not allow load to swing or to roll against any supporting members.
6. When moving gantry under load push on the gantry, not the load. Be certain that rolling surface is hard, level, clean and smooth.
7. Do not move gantry over 50 feet per minute (1/2 mph).
8. Not to be used for lifting or supporting humans.

**REQUEST FREE REPLACEMENTS IF THIS OR ANY OTHER GANTRY LABELS OR INSTRUCTIONS ARE DAMAGED OR MISSING.**

**WALLACE CRANES  
MALVERN, PA 19355  
www.wallacecranes.com**

1975/R13


### **CAUTION**

**FOLLOW INSTRUCTIONS BELOW BEFORE PULLING THIS LOAD BOLT. GANTRY WILL NOT STAND ON 3 LEGS - INJURY COULD RESULT FROM GANTRY COLLAPSING.**

**SEE "OPERATING AND SAFETY INSTRUCTIONS" (Form 379) FOR COMPLETE INFORMATION. ADJUSTING HEIGHT WHEN THIS LEG IS USED IN A WALLACE ADJUSTABLE GANTRY:**


1. Do not make adjustments when the unit is under load.
2. Secure Trolley and Hoist to prevent rolling to low end of beam.
3. Securely support the I-Beam externally (or use Wallace Gantry Jack).
4. Extend caster frame for greatest stability.
5. Lock casters parallel to I-Beam.
6. Install the Safety Stops (one per leg) before pulling load bolts. They limit downward leg travel - see instructions on tags attached to stops.
7. Raise upper leg slightly to release the load bolt, then pull out and rotate 90° (or pin where applicable) to "lock out" position.
8. After adjusting height, turn back to unlock. Be certain all load bolts are fully engaged.
9. Relocate safety stops with tags.

**WALLACE CRANES  
MALVERN, PA 19355  
www.wallacecranes.com**

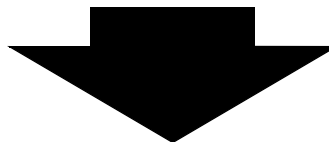

**Caution Label 1972, Caution Tags 1969, 1970, 1980**

1972/R14




**FOLLOW INSTRUCTIONS BELOW BEFORE REMOVING THIS TREAD ADJUSTMENT PIN**

**SERIOUS INJURY COULD RESULT FROM COLLAPSE OF GANTRY AND/OR MOVEMENT OF LOAD.**

1. Do not make adjustments when the gantry is under load.
2. Secure Trolley and Hoist to prevent rolling to low end of I-Beam.
3. Make certain the restraining cable is secured in place (inside or outside of the tubes, depending on model).
4. Securely support the I-Beam externally or:
5. Use Wallace Gantry jack to adjust in accord with instructions on jack and in Form 379.
6. Or use lever type winch or block and tackle, etc., to adjust tread in accord with instructions in Form 379.
7. Remove the tread adjusting pin and adjust as required. Replace the tread adjusting pin and secure with locking pin.

**WALLACE CRANES  
MALVERN, PA 19355  
www.wallacecranes.com**

1969  
R14




**DO NOT REMOVE THIS LOCKING PIN GANTRY COULD COLLAPSE -- INJURY CAN RESULT**

Only remove to disassemble gantry after I-Beam is securely supported externally. See Mfrs. instructions for assembly/disassembly.

**WALLACE CRANES  
MALVERN, PA 19355  
www.wallacecranes.com**


Front/Rear identical on Tag 1969

1970  
R14




Only remove this locking pin when adjusting caster frame spread. Read instructions on label 1972. After making adjustment, replace this locking pin to secure tread adjustment pin.

**WALLACE CRANES  
MALVERN, PA 19355  
www.wallacecranes.com**

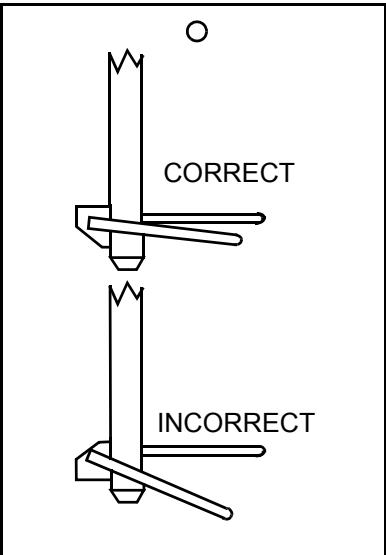


1980  
R14





**DO NOT REMOVE THIS LOCKING PIN GANTRY COULD COLLAPSE -- INJURY CAN RESULT**

Only remove to disassemble gantry after I-Beam is securely supported externally. See Mfrs. Instructions for assembly/disassembly.

**WALLACE CRANES  
MALVERN, PA 19355  
www.wallacecranes.com**

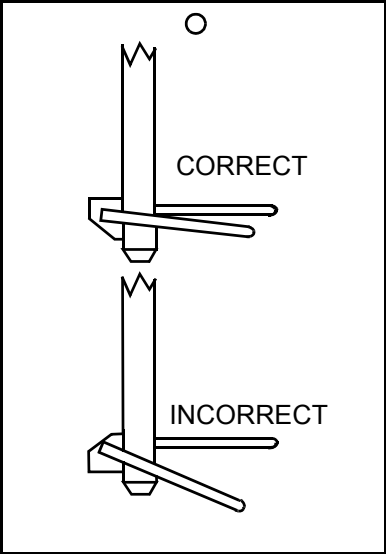

# Tag 1337
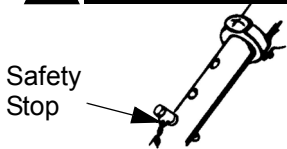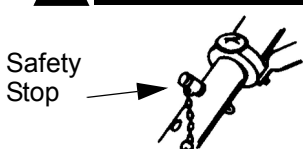
<p>1337 R14</p> <p><b>! CAUTION</b></p>  <p><b>SAFETY STOP</b></p> <p><b>LOWERING GANTRY</b> Place safety stop 3 holes or fewer below upper leg. Lower leg 2 holes maximum. Repeat as required. <u>See other side for raising.</u></p> <p><b>PRODUCTS CORP.</b> <b>MALVERN, PA 19355</b> <a href="http://www.wallacecranes.com">www.wallacecranes.com</a></p>	<p><b>! CAUTION</b></p>  <p><b>SAFETY STOP</b></p> <p><b>RAISING GANTRY</b> Place safety stop 1 hole below upper leg casting. Raise leg 2 holes maximum. Repeat as required. <u>See other side for lowering.</u></p> <p><b>WALLACE CRANES</b> <b>MALVERN, PA 19355</b> <a href="http://www.wallacecranes.com">www.wallacecranes.com</a></p>
--	--

Front of Tag

Rear of Tag

